

How To Use

Cordless Saw Blade for Tile

Attach the Cordless Saw blade for Tile onto the battery powered saw.

Make sure that the directional arrows on the blade match the spindle rotation of tool.

The Cordless Saw blade for Tile is a wet/dry cutting blade. If you use this blade for wet cutting applications, make sure the refillable water coolant bottle attached on the saw is filled prior to starting your cutting applications.

Slowly push the blade into the material maintaining a consistent slow traverse speed until you cut the entire piece of material. A slow consistent pushing motion will allow the diamonds within the blades cutting edge to cut the material easily and minimize chipping on the edge.